
belifires ^{gas fires}

Preparation manual

Smart Bell Panorama 45/59 MF

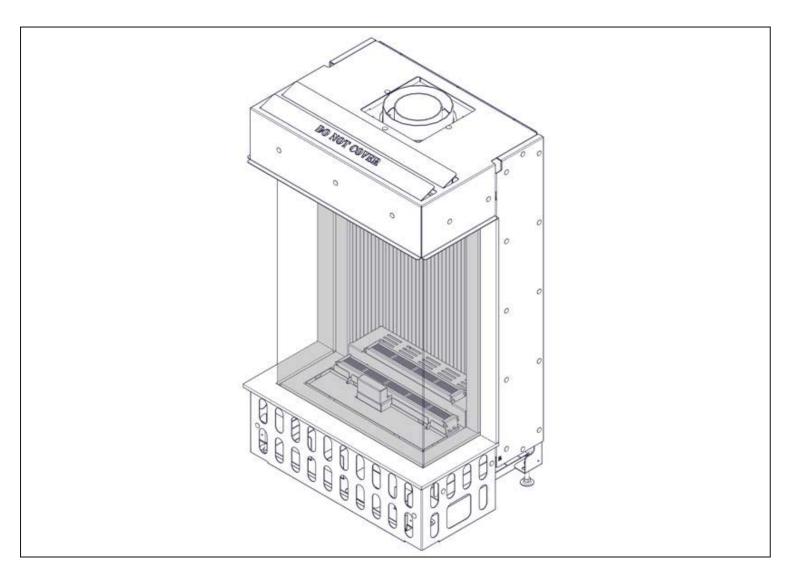

(6

Serial number:

Production date:

Introduction

belifires . gas fires

© Barbas Bellfires BV

This document or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without the prior written permission of Barbas Bellfires BV. This document could contain technical inaccuracies or typographical errors. Barbas Bellfires BV reserves the right to revise this document

from time to time in the contents thereof.

Contact information

Barbas Bellfires BV

Hallenstraat 17, 5531 AB Bladel, The Netherlands

Phone: +31 49 733 9200

E-mail: info@bellfires.com

Contents

1	Ab 1.1 1.2 1.3	Out this document How to work with this document Warnings and cautions used in this document Related documentation.	
2	Ov	erview of the concentric flue system	5
3	Sat	fety	6
	3.1	Safety instructions for installation	
4	Re	quirements	7
	4.1	Requirements on the location	
	4.2	Other requirements	
	4.3	Requirements on the outlet	
		4.3.1 Requirements on the roof outlet	
		4.3.2 Requirements on the wall outlet	
	4.4	Requirements on the concentric flue system	
		4.4.1 Possibilities for a concentric flue system with a roof outlet	
		4.4.2 Possibilities for a concentric flue system with a wall outlet	
5	Тес	chnical specification	17
	5.1	Dimensions Smart Bell Panorama 45/59	17
	5.2	Dimensions of the restriction plate	
6	Ava	ailable components for the concentric flue system	
•	6.1	Appliance part list	
	6.2	Bellfires - Muelink & Grol system Ø100 - Ø150	
	6.3	Poujoulat - DUOGAS system Ø100 - Ø150	
	6.4	Ontop - Metaloterm US system Ø100 - Ø150	27
	6.5	Jeremias/STB - H-Twin system Ø100 - Ø150	
	6.6	Jeremias - TWIN-GAS system Ø100 - Ø150	
	6.7	Modinox - PLA system Ø100 - Ø153	41

1

About this document

This document shows the necessary information to do these tasks on the Smart Bell Panorama 45/59 MF:

• Preparation for installation

This document refers to the Smart Bell Panorama 45/59 MF as 'the appliance'. This document is an essential part of your appliance. Read it carefully before you do work on the appliance. Keep it in a safe place.

The original instructions of the document are in English. All other language versions of the document are translations of the original instructions. It is not always possible to provide a detailed illustration of every single item of the equipment. The illustrations in this document show a typical setup. The illustrations are for instructional use only.

1.1 How to work with this document

- 1. Make yourself familiar with the structure and content of the document.
- 2. Read the safety chapter in detail.
- 3. Make sure that you understand all the instructions.
- 4. Do the procedures completely and in the given sequence.

1.2 Warnings and cautions used in this document

Warning

If you do not obey these instructions, there is a risk that can cause personal injury or death.

Caution

If you do not obey these instructions, there is a risk of damage to the equipment or to property.

Note

A note shows more information.

Symbol	Description
	Visual sign that there is a hazard
	Visual sign that there is a notice



1.3 Related documentation

- Preparation manual
- · Installation and maintenance manual
- User manual

2

Overview of the concentric flue system

The concentric flue system provides the appliance with combustion air and removes the flue gases from the appliance. The concentric flue system is made of these items:

Item	Description
Concentric flue	The concentric flue is a pipe with an inner pipe. The in- ner pipe is used as flue gas channel and the space be- tween the inner pipe and the outer pipe is used as combustion air channel
Flue gas channel	The flue gases from the appliance flow through the channel to the outlet by a natural draft
Combustion air channel	Supplies the appliance with fresh air from the outlet through the channel
Outlet/terminal	Entry for the combustion air channel and exit for the flue gas channel

3 Safety

3.1

Safety instructions for installation

Caution:



- The appliance must be installed as a 'room sealed system' appliance by a certified and registered gas installation engineer in accordance with the supplied installation instructions, and nationally and locally applicable regulations.
- If you have any questions regarding the installation, consult your local gas company.
- Only use items in the installation that are specified in this manual and the related documents.
- Only use the following brands for the installation of the concentric flue system:

Manufacturer	system
Bellfires	Muelink & Grol system
Poujoulat	DUOGAS system
Ontop	Metaloterm US system
Jeremias/STB (STB = Schoorsteen Techniek Brummen NL)	H-Twin system
Jeremias	TWIN-GAS system
Modinox	PLA system

- Do not use a combination of parts from different brands for the installation of the concentric flue system.
- Before beginning the installation, check that the details on the rating plate correspond to the gas type and supply pressure to which the appliance will be connected.

7

4 Requirements

4.1 Requirements on the location

- Never use combustible building materials for the fireplace.
- Do not install the appliance against a flammable rear wall.
- Install a nonflammable insulation plate of at least 12 mm between the appliance and the rear wall. The insulation plate must cover the entire area of the rear of the appliance.
- The appliance must be installed approximately 2 cm from the rear wall.
- If the fire burns in the appliance, make sure that the floor temperatures below and in front of the appliance cannot be higher than 85 °C.
- Make sure that the room where the appliance is installed is properly ventilated.

4.2 Other requirements

- The gas supply connection is located under in the appliance for an easy connection to all directions.
- Only use gas piping of at least 1/2" and a shut-off valve to connect the gas supply to the gas regulator block of the appliance.
- Make sure that there is a wall socket with earth connection nearby the appliance. The socket must be accessible at all times. The powercable (+ 0.5 m) is coming from the rear of the appliance.
- Install the fireplace on a solid floor that can bear the weight of the appliance and the fireplace.
- If the floor is made of flammable material, take correct safety measures. Install a temperature protection plate made of nonflammable material between the appliance and the floor.
- The appliance must be installed into an existing open fireplace or as a built-in appliance in a new fireplace.
- If the concentric flue system is installed in a chimney that is used for wood or coal fire, clean the chimney.
- If you built a new fireplace, make sure that it is ventilated with vents at the bottom and top of the fireplace. If the fireplace is not ventilated the temperature of the appliance can increase to dangerous temperatures and damage the fireplace.
- Keep a minimum distance between the appliance and a front wooden fireplace surround; with a depth of less than 10 cm, of:
 - 5 cm on the sides: (minimum distance: side appliance leg wooden fireplace surround)
 - 40 cm at the top: (minimum distance: top appliance bottom of beam wooden fireplace surround) The temperature on the underside of the beam of the wooden fireplace must never exceed 85°C. Optional: insulate the bottom of the wooden

beam with a fireproof plate.

4.3 Requirements on the outlet

4.3.1 Requirements on the roof outlet

Make sure that the outlet is installed at least 0.5 meter from the edge of the roof.



Note:

All the minimum distances are guidelines. Consult your national and local directives for the exact minimum distances.

Location of any of the items(*)	Minimum distance between the items and the roof outlet
At the same roof as the outlet	3 m
At a different roof as the outlet	1 m
At a lower positioned wall than the outlet	1 m
At a higher sloping surface than the outlet	3 m

(*) Items:

- A ventilation opening that services an occupied room, a toilet or a bathroom.
- A combustibion air supply, if the supply flows through an occupied room.
- A window that can be opened that services an occupied room, a toilet or a bathroom.

4.3.2 Requirements on the wall outlet

Make sure that the outlet is installed at least 0.5 meter from:

- The corner of a building
- the edge of the roof
- The roof overhang and rain gutter
- Balconies etc. unless the exhaust construction extends to at least the face of the protruding section



Note:

All the minimum distances are guidelines. Consult your national and local directives for the exact minimum distances.

If the outlet is installed horizontally in less than 0.5 m and vertically in less than 2 m from a public area, install an effective protector. Make sure that the mesh size of the guard does not affect the operation of the appliance.

If the height of the outlet is less than 3 meter from the floor, the distance between the outlet and a garden or a terrace must be at least 2 meter.

Location of any of the items(*)	Minimum distance between the items and the wall outlet
On a wall where the item services a living space other than that of the owner of the fireplace.	Do not install the wall outlet under an item.
On a wall (**)	 Below the item: 2 m Above the item: 0.75 m Left or right of the outlet: 0.75 m
within 1 meter of the roof overhang	2 m
Under a balcony, walkway, etc.	2 meter from the underside of the bal- cony or walkway
Under a balcony, walkway, etc. if the outlet extends to the front	2 m
A facing wall less than 2 meters from the outlet.	Apply the minimum distance for items on a wall.

(*) Items:

Smart Bell Panorama 45/59

8

- A ventilation opening that services an occupied room, a toilet or a bathroom.
- A combustion air supply, if the supply flows through an occupied room.
- A window that can be opened that services an occupied room, a toilet or a bathroom.

(**) If an obstruction protrudes at least 0.5 meter between the item and the outlet and the obstruction has a lenght of at least the recommended minimum distance, ignore the recommended minimum distance.

4.4

Requirements on the concentric flue system



Caution:

- Make sure that no flammable materials are located close to the flue system. The outer walls of the flue system can be 150 °C.
- Make sure that the concentric flue system is in a casing.
 - Make sure that the casing is made of heat resistant material.
 - Make sure that air can flow in the casing. Use grates near the floor and • near the ceiling. Do this for every floor where the casing is located.
- Do not insulate the concentric flue. •

The parts that are required for the installation of the concentric flue system are numbered in the illustrations and refer to the part list in $\boldsymbol{6}$.

Use the universal wall/floor support (number 36 in the part list) to attach the concentric flue system to the casing and/or the floor.


Floor support	Wall support

Install a concentric flue system as described in this section.

Some configurations of the concentric flue system require the installation of a flue restriction plate. Different sizes of the flue restriction plate are delivered with the appliance. Refer to the Installation and maintenance manual.


4.4.1 Possibilities for a concentric flue system with a roof outlet

Rigid concentric flue systems

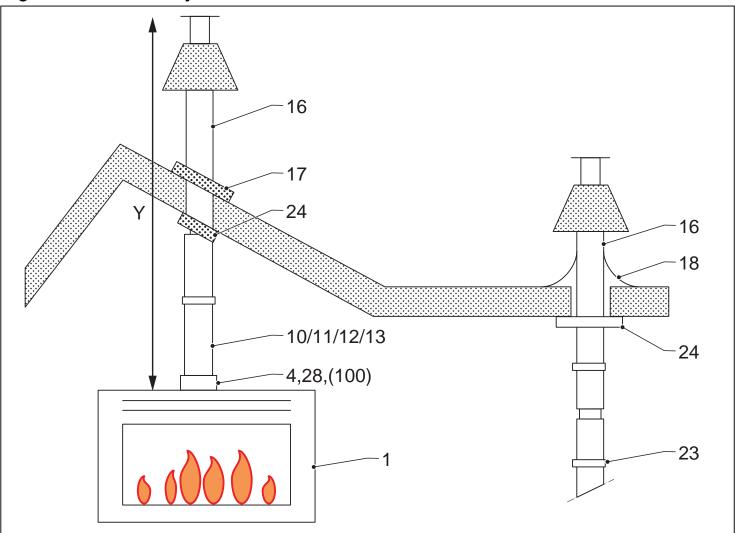

Y	Flue gas restriction plate width
(min max.)	Concentric connection on the appliance is Ø100-Ø150 mm
2.0 - 4.0 m	30 mm
4.0 - 12.0 m	40 mm

10

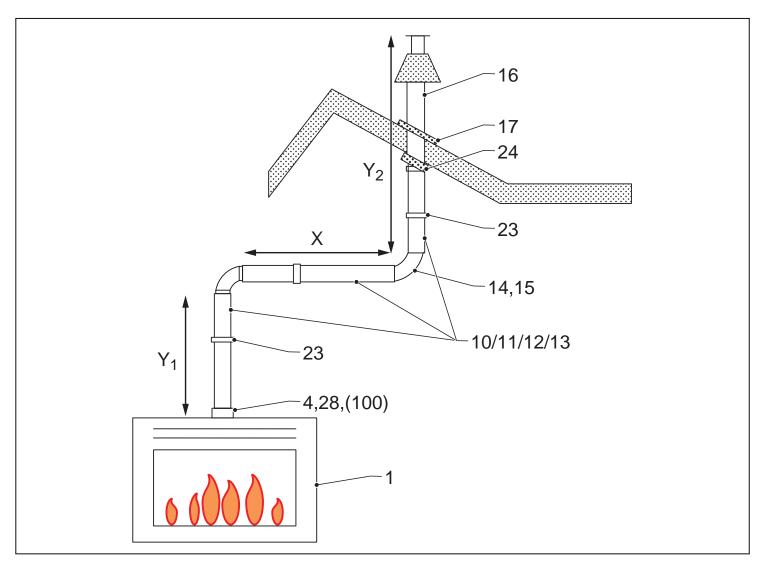


Y ₁	X	$Y_1 + Y_2$	Flue gas restriction plate width
(min max.)	(min max.)	(min max.)	Concentric connection on the appliance is Ø100-Ø150 mm
1.0 - 11.0 m	0 - 3.0 m	1.0 - 11.0 m	-



Caution:

Make sure that $Y_1 + Y_2$ is at least 2 times larger than X.

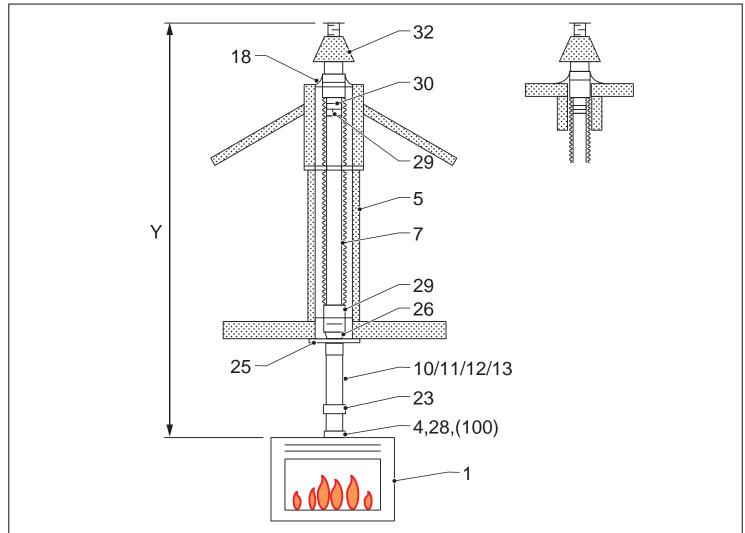


Flexible concentric flue systems

Y	Flue gas restriction plate width
(min max.)	Concentric connection on the appliance is Ø100-Ø150 mm
2.0 - 4.0 m	30 mm
4.0 - 12.0 m	40 mm

Roof outlet using an flexible Ø100 mm liner in an existing lined chimney.

12

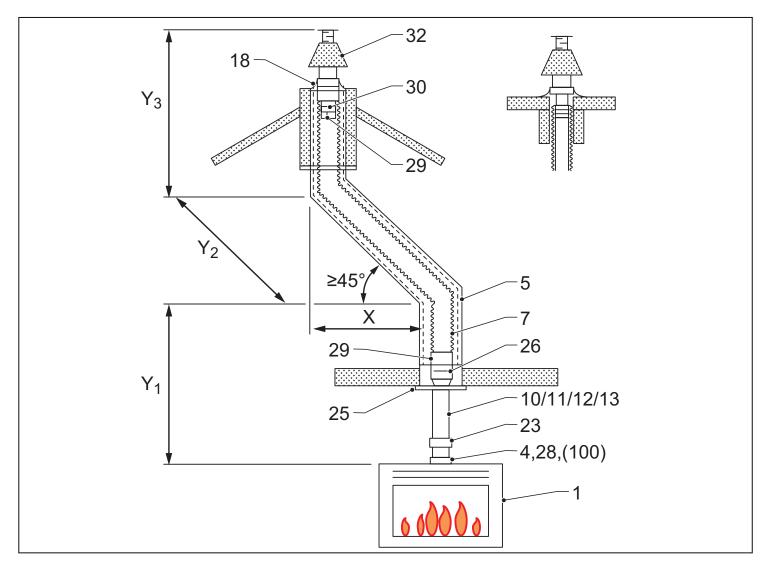

Y ₁	Х	$Y_1 + Y_2 + Y_3$	Flue gas restriction plate width
(min max.)	(min max.)	(min max.)	Concentric connection on the appliance is Ø100-Ø150 mm
1.0 - 11.0 m	0 - 3.0 m	1.0 - 11.0 m	-




Caution:

Make sure that $Y_1 + Y_2 + Y_3$ is at least 2 times larger than X.

Roof outlet using an flexible Ø100 mm liner in an existing lined chimney.

Requirements




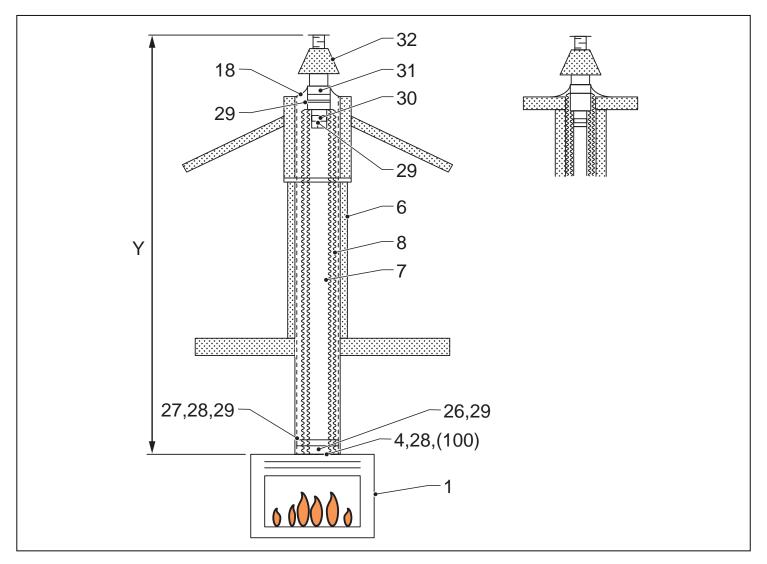

Y	Flue gas restriction plate width
(min max.)	Concentric connection on the appliance is Ø100-Ø150 mm
2.0 - 4.0 m	30 mm
4.0 - 12.0 m	40 mm

Roof outlet using an flexible Ø100 mm liner and flexible Ø150 mm liner in an existing unsound lined chimney.

14

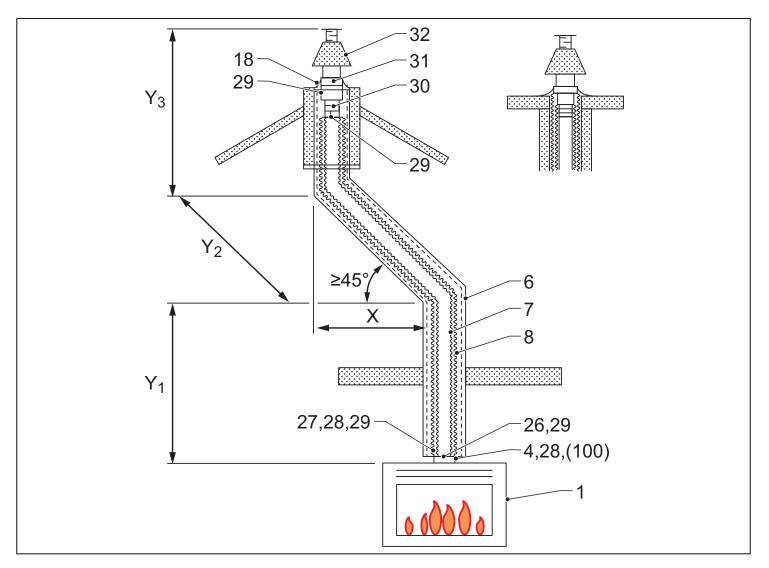

Y ₁	Х	$Y_1 + Y_2 + Y_3$	Flue gas restriction plate width
(min max.)	(min max.)	(min max.)	Concentric connection on the appliance is Ø100-Ø150 mm
1.0 - 11.0 m	0 - 3.0 m	1.0 - 11.0 m	-



Caution:

Make sure that $Y_1 + Y_2 + Y_3$ is at least 2 times larger than X.


Roof outlet using an flexible Ø100 mm liner and flexible Ø150 mm liner in an existing unsound lined chimney.

4.4.2 Possibilities for a concentric flue system with a wall outlet

Install the wall outlet in the correct position as shown in the figure. The centre of the inner pipe must be positioned above the centre of the outer pipe.




Rigid concentric flue systems

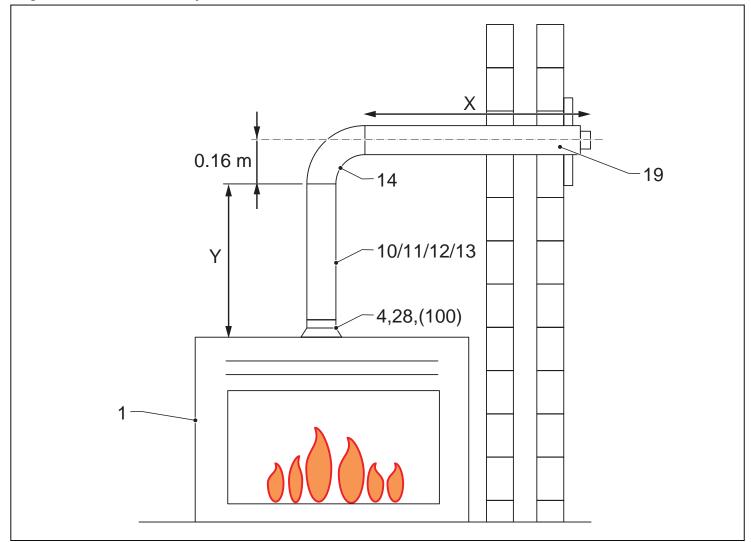

Y	x	Flue gas restriction plate width
(min max.)	(min max.)	Concentric connection on the appliance is Ø100- Ø150 mm
1.0 - 2.0 m	0 - 5.0 m	-

5 Technical specification

5.1 Dimensions Smart Bell Panorama 45/59

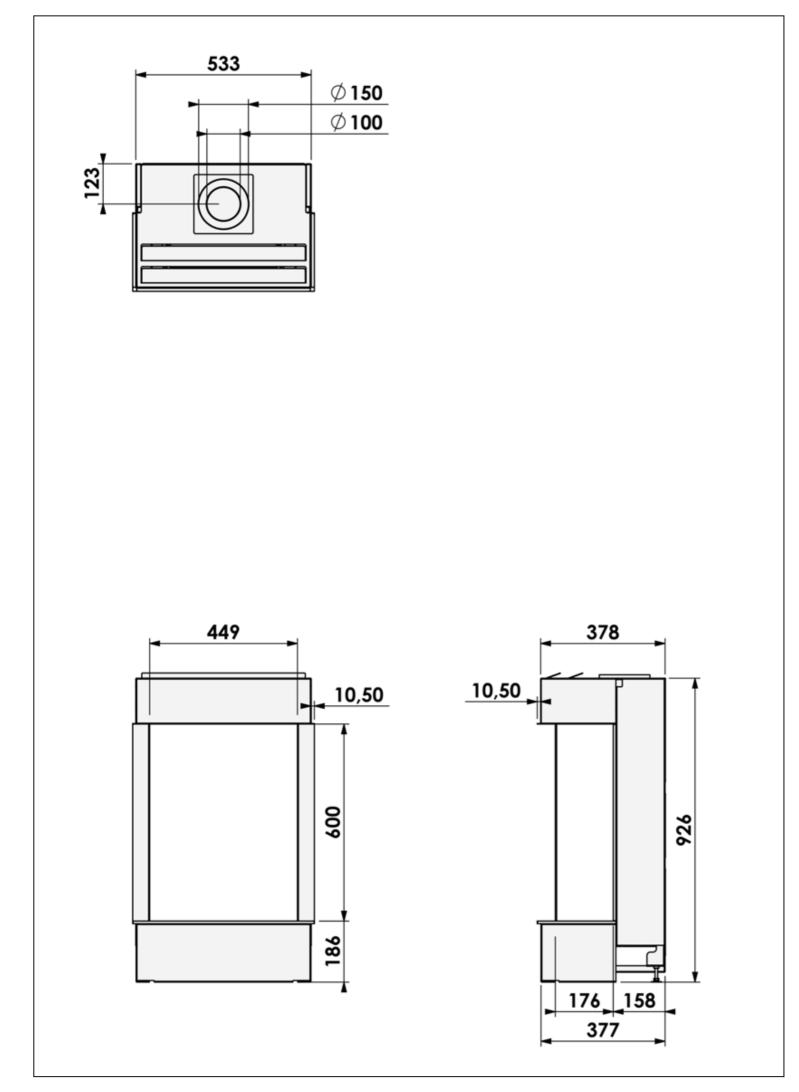

5.2 Dimensions of the restriction plate

Width of the delivered flue restriction plates in mm		
Concentric flue connection Ø100 - Ø150		
Roof-mounted outlet		
30		
40		
50		
65		

6

Available components for the concentric flue system



Caution:

Observe the installation instructions that are supplied with the components of the concentric flue system.

The gas fire, in combination with the concentric flue system [Ø100 mm - Ø150 mm] (rigid and/or flexible) for the brand types mentioned below, has been approved in accordance with the European CE-norm for gas appliances and may therefore be used only with these systems.

Table 1: Approved brands

Manufacturer	system
Bellfires	Muelink & Grol system
Poujoulat	DUOGAS system
Ontop	Metaloterm US system
Jeremias/STB (STB = Schoorsteen Techniek Brummen NL)	H-Twin system
Jeremias	TWIN-GAS system
Modinox	PLA system

The permitted components for these systems are listed in this chapter. The guarantee on the appliance lapses if it is installed, fully or partially, with other components or a different flue system. The concentric flue [Ø100 mm - Ø150 mm] systems can be used with either a newly-built or existing chimney.

Make sure that the wall or roof termination kit that is used for the installation of the concentric flue system is also listed in the available parts list.

6.1 Appliance part list

Fig No.	Description
1	Gas fire; Concentric flue connection Ø100/Ø150 mm.
2	-
3	-
4	Restriction plate (The different sizes restriction plates are supplied with every appliance).
5	Chimney, min. Ø150 mm internal, totally gas tight.
6	Chimney or fireproof sleeving. min. Ø160 mm internal.
7	Ø100 mm internal flexible stainless steel gas vent chimney liner AISI 316TI.
8	Ø150 mm internal flexible stainless steel gas vent chimney liner AISI 316TI.
9	-

6.2 Bellfires - Muelink & Grol system Ø100 - Ø150

Fig.	Bellfires	DECODIDEION	Colo	or (*)	Applic	cation
NO.	Art./ OR- DER NO.	DESCRIPTION	rvs	antr.	rigid	flex
10	302289	Twin-wall balanced flue pipe. L= 500 mm.	•		•	
11	302290	Twin-wall balanced flue pipe. L= 1000 mm.	•		•	
12	302291	Telescopic twin-wall balanced flue pipe, L= min. 325 / max. 440 mm.	•		•	
13	302292	Adjustable length twin-wall balanced flue pipe, L= 500 mm.	•		•	

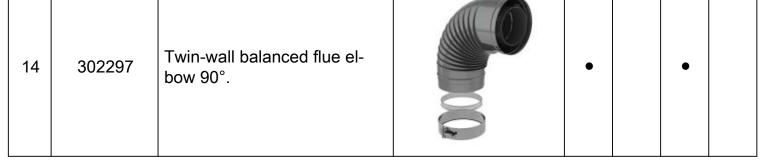


Fig. NO.	Bellfires Art./ OR-	DESCRIPTION			or (*)	Applic	
NO.	DER NO.			rvs	antr.	rigid	flex
15	302298	Twin-wall balanced flue el- bow 45°.		•		•	
16	302295	Vertical (roof) termination kit, L= 1360 mm.		•	•	•	•
17	302212	Adjustable roof flashing. Roof pitch 20° - 45° (**), with lead flashing.		•		•	•
18	302213	Roof flashing for existing chimney or flat roof.	E	•		•	•
19	302296	Horizontal (wall) termination kit, L= 600 mm (adjustable), including a set of wall spacer plates.		•	•	•	•
20	302293	Stainless steel locking band Ø150 mm, quick-fastening.		•		•	•

21	302210	Silicone seal Ø150 mm.			•	•
23	302215	Wall strap.		•	•	•
24	302214	Set of ceiling finishing plates / Fire stops.	0	•	•	•

Fig.	Bellfires Art./ OR-	DESCRIPTION	Colo	or (*)	Applie	cation
NÔ.	DER NO.	DESCRIPTION	rvs	antr.	rigid	flex
25	302189	Ceiling plate for transition Ø100 mm / Ø150 mm rigid - Ø100 mm (flex.).	•		•	•
26	302278	Stainless steel adapter piece (100) from fire to fl exible, Ø100 mm external (rigid) x Ø107 mm internal (flex.). [ap- pliance - Ø100 mm flex.] and [Ø100 mm rigid - Ø100 mm flex.].	•			•
27	302279	Stainless steel adapter piece (150) fire to fl exible, Ø148 mm external (rigid) x Ø148 mm internal (flex.) [appliance - Ø150 mm flex.].	•			•
28	302217	Stainless steel locking band Ø150 mm. For adapter 150 [appliance - Ø150 mm (flex.)], Screw-fastening.	•		•	•
29	303776	Stainless steel screws Ø3.5 mm x 9.5 mm. For securing the flexible concentric flue. (Minimum 3 screws per con- nection).	•			•
30	304041	Hose clamp Ø100 mm. (Mini- mum 2 per connection).	•			•
31	304042	Hose clamp Ø150 mm. (Mini- mum 2 per connection)	•			•

		·	,	CRU MARK					
--	--	---	---	----------	--	--	--	--	--

Fig.	Bellfires	DESCRIPTION	Colo	or (*)	Applic	cation
NÔ.	Art./ OR- DER NO.	DESCRIPTION	rvs	antr.	rigid	flex
32	302307	Vertical (roof) termination kit, L = 610 mm. Suitable for a flexible flue system.	•	•	•	•
33	302301	Concentric T-piece with gauging orifice.	•		•	
34	302302	Concentric pipe with gauging orifice, L = 165 mm.	•		•	
35	302303	90° concentric bend with in- spection panel.	•		•	
36	321948	Universal wall / floor support Ø150 mm	•		•	

- rvs : Stainless steel self-color, polished
- antr. : Anthacite color lacquer, matt

(**) Adjustable roof flashing for a slope > 45° can be supplied on request.

When installing a balanced-flue "closed" gas fire in an existing chimney, ensure stainless steel flexible liners (Ø100 mm or Ø130 mm) conforming with BS 316 are used to conduct the spent gases.

6.3	Poujoulat - DUOGAS system Ø100 - Ø150
-----	---------------------------------------

Fig.	Poujoulat Art./ OR-	DESCRIPTION	Colo	or (*)	Applic	cation
NO.	DER NO.		rvs	antr.	rigid	flex
	34100403	Twin-wall balanced flue pipe, L= 250 mm.				
10	34100404	Twin-wall balanced flue pipe. L= 450 mm.	•		•	
11	34100405	Twin-wall balanced flue pipe. L= 950 mm.	•		•	
12	34100429	Telescopic twin-wall balanced flue pipe, L= min. 390 / max. 640 mm.	•		•	
14	34100441	Twin-wall balanced flue el- bow 90°.	•		•	
15	34100421	Twin-wall balanced flue el- bow 45°.	•		•	
	34100411	Twin-wall balanced flue el- bow 30°.	•		•	
	34100401	Twin-wall balanced flue el- bow 15°.	•		•	

Fig.	Poujoulat Art./ OR-	DESCRIPTION	Colo	or (*)	Applic	cation
NO.	DER NO.		rvs	antr.	rigid	flex
16	34100654	Vertical (roof) termination kit, L= 140 mm .	•		•	
17	45150171	Roof flashing, suitable for a brick roof, with a roof pitch of 15°- 30°.	•		•	
17	45150170	Roof flashing, suitable for a tiled roof, with a roof pitch of 15°- 30°.	•		•	
17	45150172	Roof flashing, suitable for a brick roof, with a roof pitch of 30°- 45°.	•		•	
17	45150173	Roof flashing, suitable for a tiled roof, with a roof pitch of 30°- 45°.	•		•	
18	45150169	Roof flashing for existing chimney or flat roof.	•		•	
19	34100610	Horizontal (wall) termination kit, L= min. 365 mm / max. 585 mm.	•		•	
20	45150076	Stainless steel locking band Ø150 mm, quick-fastening.	•		•	
23	45150072	Wall strap, Ø150 mm.	•		•	

Fig.	Poujoulat Art./ OR-	DESCRIPTION	Colo	or (*)	Applie	cation
NO.	DER NO.		rvs	antr.	rigid	flex
24	37100442	Ceiling/wall plate with spacers and ventilation grooves.	•		•	
24	37100425	Set of ceiling finishing plates / Fire stops, suitable for a roof pitch of 0°- 10°.	•		•	
24	37100426	Set of ceiling finishing plates / Fire stops, suitable for a roof pitch of 10°- 30°.	•		•	
24	37100427	Set of ceiling finishing plates / Fire stops, suitable for a roof pitch of 30°- 40°.	•		•	
24	37100428	Set of ceiling finishing plates / Fire stops, suitable for a roof pitch of 40°- 50°.	•		•	
34	34100407	Concentric pipe with inspec- tion opening, L= 250 mm.	•		•	
36	45150165	Roof support, (universal) Ø150 mm.	•		•	
36	45150081	Floor support, (universal) Ø150 mm.	•		•	
37	34100611	Adapter: Bellfires Ø100-150 mm → Poujoulat DUOGAS Ø100-150 mm (Appliance 100/150 → Poujoulat DUO- GAS 100/150)	•		•	
100	34100614	Adapter: Bellfi res Ø130-200 mm → Poujoulat DUOGAS Ø100-150 mm (Appliance 130/200 → Poujoulat DUO- GAS 100/150)	•		•	
101	34100613	Concentric reduction of Pou- joulat DUOGAS Ø130-200 mm → Poujoulat DUOGAS Ø100-150 mm	•		•	

6.4 Ontop - Metaloterm US system Ø100 - Ø150

Fig.	Ontop Art./ ORDER	DESCRIPTION	Colo	or (*)	Applic	cation
NO.	NO.		 rvs	antr.	rigid	flex
	USA 10	Adapter for Bellfires applian- ces with Ø100-Ø150 mm concentric connection.	•		•	
	US 25 10	Twin-wall balanced flue pipe, L = 250 mm.	•		•	
10	US 50 10	Twin-wall balanced flue pipe. L= 500 mm.	•		•	
11	US 100 10	Twin-wall balanced flue pipe. L= 1000 mm.	•		•	
12	USPP 10	Telescopic twin-wall balanced flue pipe, L= min. 60 / max. 250 mm.	•		•	
14	USB 90 10	Twin-wall balanced flue el- bow 90°.	•		•	
15	USB 45 10	Twin-wall balanced flue el- bow 45°.	•		•	
15	USB 30 10	Twin-wall balanced flue el- bow 30°.	•		•	

Fig.	Ontop Art./ ORDER	DESCRIPTION		Colo	or (*)	Applic	cation
NO.	NO.			rvs	antr.	rigid	flex
15	USB 15 10	Twin-wall balanced flue el- bow 15°.		•		•	
16	USDVC2 10	Vertical (roof) termination kit, L= 375 mm.		•		•	
16	USSR 10	Storm collar Ø150 mm.		•		•	
17	USLS 10	Adjustable roof flashing. Roof pitch 20° - 45°, with lead flashing.	\square	•		•	
17	USDH 10	Roof flashing plate for roof pitch 5°- 30°.		•		•	
18	USDP 10	Roof flashing for existing chimney or flat roof.		•		•	
18	USDPAL 10	Roof flashing - Aluminium - For existing chimney or flat roof.		•		•	
19	USDHC5 10	Horizontal (wall) termination kit, L= 475 mm (adjustable).		•		•	
20	USKB 10	Locking band, quick-fasten- ing.		•		•	

Fig.	Ontop Art./ ORDER	DESCRIPTION		Color (*)		Applic	cation
NO.	NO.			rvs	antr.	rigid	flex
21	USAB 10	Cover band, screw-fastening.		•		•	
23	USMB 10	Wall strap, adjustable.		•		•	
23	USEB 10	Fitting bracket.		•		•	
24	USCP 10	Set of ceiling finishing plates / Fire stops / Centring plates.		•		•	
24	USDQ 10	Roof support.	C. I.V. I.V. C. C. V.	•		•	
25	USSAN 10	Renovation set.		•		•	
25	USSAN1 10	Top of renovation set.		•		•	

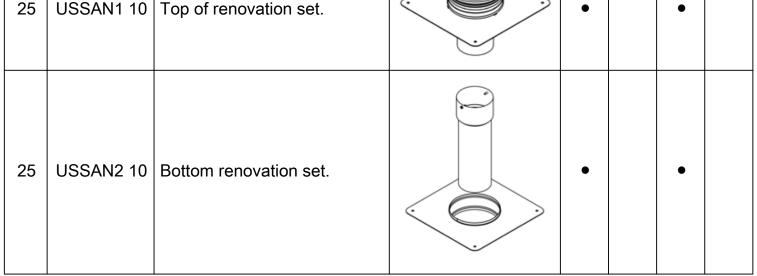


Fig.	Ontop Art./ ORDER	DESCRIPTION		Colo	or (*)	Applic	cation
NO.	NO.			rvs	antr.	rigid	flex
28	USKBS 10	Locking band, screw-fasten- ing.		•		•	
	USI 10	Concentric pipe with inspec- tion panel, L= 250 mm.		•		•	
34	USEM 10	Concentric pipe with gauging orifice, L= 150 mm.		•		•	
35	USBI 10	90° concentric bend with in- spection panel.		•		•	
	USR 10	Rosette smooth Ø150 mm.	· · ·	•		•	
	USMPG 10	Wall plate large Ø150 mm, square 300 mm.		•		•	
	USAH 10	Spacer bracket.		•		•	
	USVG 10 13	Concentric reduction of Ø100-Ø150 mm → Ø130- Ø200 mm.		•		•	

6.5 Jeremias/STB - H-Twin system Ø100 - Ø150

Fig.	Jeremias	DESCRIPTION		Cold	or (*)	Applic	cation
NŎ.	Art./ OR- DER NO.	DESCRIPTION		rvs	antr.	rigid	flex
11	ATWINL 13 100-150	Twin-wall balanced flue pipe. L= 1000 mm.		•		•	
10	ATWINL 14 100-150	Twin-wall balanced flue pipe. L= 500 mm.		•		•	
10	ATWINL 15 100-150	Twin-wall balanced flue pipe. L= 250 mm.		•		•	
12	H-TWIN 742 100-150	Telescopic twin-wall balanced flue pipe, L= min. 1100 / max. 1400 mm.					
12	H-TWIN 467 100-150	Telescopic twin-wall balanced flue pipe, L= min. 1100 / max. 1900 mm.	~	●		•	
12	ATWIN 197 100-150	Telescopic twin-wall balanced flue pipe, L= min. 600 / max. 900 mm.					
15	ATWIN 16 100-150	Twin-wall balanced flue el- bow 15°.		•		•	

Fig.	Jeremias Art./ OR-	DESCRIPTION	Col	or (*)	Application		
NÔ.	DER NO.	DESCRIPTION	rvs	antr.	rigid	flex	
15	ATWIN 17 100-150	Twin-wall balanced flue el- bow 30°.	•		•		
15	ATWIN 18 100-150	Twin-wall balanced flue el- bow 45°.	•		•		
14	ATWIN 60 100-150	Twin-wall balanced flue el- bow 90°.	•		•		
14	ATWIN 60F 100-150	Twin-wall balanced flue el- bow 90° - Short. Especially for connection to a wall termi- nation.	•		•		
16	A 463 100-150	Roof termination - long, with pipe, L = 1080 mm, Vertical.	•	•	•		

|--|--|--|--|--|--|

Fig.	Jeremias Art./ OR-	DESCRIPTION		Colo	or (*)	Applic	cation
NÔ.	DER NO.	DESCRIPTION		rvs	antr.	rigid	flex
16	ATWIN 92 100-150	Roof termination - short with pipe, L = 300 mm, Vertical.		•	•	•	
32	ATWIN 92pe 100-150	Roof termination, with pipe, L = 495 mm, Vertical, with roof flashing for existing chimney or flat roof.		•	•	•	
17	ATWIN 45DD 100-150	Roof flashing for roof pitch 30°, with lead flashing and storm collar.		•	•	•	
17	ATWIN 60DD 100-150	Roof flashing for roof pitch 45°, with lead flashing and storm collar.		•		•	
	ATWIN 307 100-150	Storm collar.		•		•	
24	ADBL-DW 100-150	Set of ceiling finishing plates / Fire stops.	C	•		•	
20	ATWIN 45 100-150	Locking band, Screw-fasten- ing (Standard on all compo- nents).		•		•	
23	ATWIN 22 100-150	Wall strap, adjustable.		•		•	
23	ATWIN 23 100-150	Wall strap, distance adjusta- ble 60-250 mm.		•		•	

Fig.	Jeremias	DESCRIPTION		Colo	or (*)	Applic	cation
NŎ.	Art./ OR- DER NO.	DESCRIPTION		rvs	antr.	rigid	flex
19	A681 100-150	Horizontal (wall) termination kit, L= 495 mm (horizontally adjustable), including one set of wall spacer plates.		•		•	
33	H-TWIN 752 100-150	Concentric T-piece with gauging orifice. Inspection panel with cover cap and condensation-opening.		•		•	
	ATWIN 465 100-150	Adapter: H-TWIN Ø100-150 → Flex Stainless steel ; Ø100 mm Incl. Ceiling plate 300x300 mm.		•		•	
	ATWIN 466 100-150	Adapter: Flex Stainless steel; Ø100 mm → H-TWIN Ø100-150 Incl. Chimney(ceil- ing)plate 300x300 mm.		•		•	
36	ASDH2 100-150	Universal wall / floor support Ø150 mm.	A Laternahlarung auch gegenüber Halteetinkel angepunktet	•		•	
100	A464 130	Concentric reduction of H- TWIN Ø130 / Ø200 mm → H- TWIN Ø100 / Ø150 mm.		•		•	

6.6 Jeremias - TWIN-GAS system Ø100 - Ø150

Fig. NO.	Jeremias Art./ OR- DER NO.	DESCRIPTION	Color (*)		Application		
			rvs	antr.	rigid	flex	
	TWG1634 100-150	Bellfires Appliance connec- tion / Adapter Bellfires Ø100/150 mm → Jeremias TWIN-GAS Ø100/150 mm L = 160 mm Including locking band (2x).	•		•		
11	TWG13 100-150	Twin-wall balanced flue pipe, L = 1000 mm Including lock- ing band.	•		•		
10	TWG14 100-150	Twin-wall balanced flue pipe, L = 500 mm Including locking band.	•		•		
10	TWG15 100-150	Twin-wall balanced flue pipe, L = 250 mm Including locking band.	•		•		

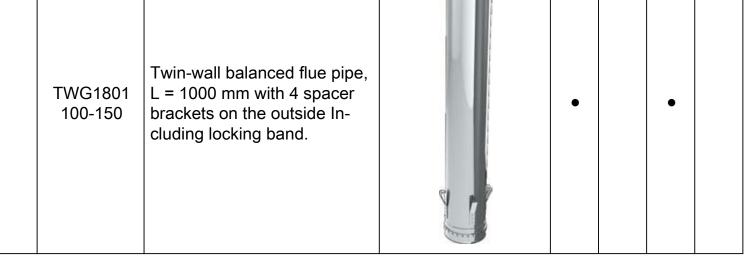


Fig.	Jeremias		Color (*)		Application	
NO.	Art./ OR- DER NO.	DESCRIPTION	rvs	antr.	rigid	flex
12	TWG50 100-150	Telescopic twin-wall balanced flue pipe, L= min. 330 / max. 420 mm Including locking band.	•		•	
15	TWG16 100-150	Twin-wall balanced flue el- bow 15°. Including locking band.	•		•	
15	TWG17 100-150	Twin-wall balanced flue el- bow 30°. Including locking band.	•		•	
15	TWG18 100-150	Twin-wall balanced flue el- bow 45°. Including locking band.	•		•	
14	TWG60 100-150	Twin-wall balanced flue el- bow 90°. Including locking band.	•		•	
14	TWG1786 100-150	Twin-wall balanced flue el- bow 90° - with support leg In- cluding locking band and sealing cap under.	•		•	
14	TWG1676 100-150	Twin-wall balanced flue el- bow 90° - short - eccentric. Especially for connection to a wall termination TWG1619 In- cluding locking band.	•		•	

	cidaling locking band.	-		

Fig.	Jeremias Art./ OR-	DESCRIPTION	Colo	or (*)	Applic	cation
NÔ.	DER NO.	DESCRIPTION	rvs	antr.	rigid	flex
16	TWG272 100-150	Roof termination (vertical) L= 615 mm. Including locking band.	•		•	
17	TW53 150	Roof flashing with a roof pitch of 5° - 15° With flex alu-flash- ing and storm collar.	•		•	
17	TW59 150	Roof flashing with a roof pitch of 16° - 25° With flex alu- flashing and storm collar.	•		•	
17	TW38 150	Roof flashing with a roof pitch of 26° - 35° With flex alu- flashing and storm collar.	•		•	
17	TW54 150	Roof flashing with a roof pitch of 36° - 45° With flex alu- flashing and storm collar.	•		•	
18	TW52 150	Roof flashing for existing chimney or flat roof With storm collar.	•		•	
	KL72 150	Storm collar (spare part).	•		•	
19	TWG1619 100-150	Wall termination kit, L= 600 mm (horizontal) Adjustable. Incl. locking band and one set of wall spacer plates.	•		•	

Fig.	Jeremias Art./ OR-	DESCRIPTION		Colo	or (*)	Applic	cation
NO.	DER NO.			rvs	antr.	rigid	flex
20	TW45 150	Locking band, screw-fasten- ing (spare part).		•		•	
21	ALBI26 150	Silicone sealing ring for outer pipe (spare part).	\bigcirc			•	
23	ZUWA704 150	Wall strap. Distance to the wall: WA= 50 mm.		•		•	
	ZU- WA891130	Extension pieces for the wall strap ZUWA704 L= 130 mm.	36.35	•		•	
	ZU- WA891200	Extension pieces for the wall strap ZUWA704 L= 200 mm.	35-38	•		•	
	ZU- WA891250	Extension pieces for the wall strap ZUWA704 L= 250 mm.	35 35	•		•	
	ZUWA706	Extension pieces for the wall strap ZUWA704 L= 400 mm, WA = 50 - 360 mm.		•		•	
24	ZUDA074 150	Set of ceiling finishing plates / Fire stops for a flat roof : 0°.		•		•	
24	ZUDA99V 150	Set of ceiling finishing plates / Fire stops for a pitched roof : 0° - 30°.		•		•	
24	ZUDA98V 150	Set of ceiling finishing plates / Fire stops for a pitched roof : 31° - 45°.		•		•	

Fig.	Jeremias Art./ OR-	DESCRIPTION	Colo	or (*)	Applie	cation
NO.	DER NO.		rvs	antr.	rigid	flex
24	ZU- DA99VHL 150	Set of ceiling finishing plates / Fire stops with ventilation openings for a pitched roof : 0° - 30°.	•		•	
24	ZU- DA98VHL 150	Set of ceiling finishing plates / Fire stops with ventilation openings for a pitched roof : 31° - 45°.	•		•	
25	FD08 100	Adapter: TWIN-GAS to FLEX. (only for the inner pipe Ø100 mm).	•		•	
25	TWG1276D 100-150	Chimney-/flat roof-/ceiling - plate with adapter: FLEX to TWIN-GAS.	•		•	
25	ZUWA1618 100	Adapter: TWIN-GAS to 'Schaft' (DE).	•		•	
25	TWG1732 100-150	Chimney-/flat roof-/ceiling - plate with adapter: Ø100 rig- id/flex to TWIN- GAS .	•		•	
33	TWG317 100-150	Concentric T-piece 90°. In- cluding locking band.	•		•	
34	TWG51 100-150	Concentric pipe with gauging orifice L= 200 mm. Including locking band.	•		•	
35	TWG10 100-150	Concentric pipe, L= 300 mm with cleaning opening/inspec- tion panel. Including locking band.	•		•	
35	TWG19 100-150	Concentric elbow 90° with cleaning opening/inspection panel. Including locking band.	•		•	

Fig.	Jeremias	DESCRIPTION	Colo	or (*)	Applie	cation
NŎ.	Art./ OR- DER NO.	DESCRIPTION	rvs	antr.	rigid	flex
36	TWG05 100-150	Base plate/Cover-under with 2x ½" gauging orifice, sealing cap and condensate drain at the bottom.	•		•	
36	TWG07 100-150	Base plate / floor support.	•		•	
	DW391	Wall support with transverse support Type I: 350 mm - Dis- tance to wall: WA= max. 50 mm.	•		•	
	DW392	Wall support with transverse support Type II: 500 mm - Distance to wall: WA= 50 - 150 mm.	•		•	
	DW393	Wall support with transverse support Type III: 750 mm - Distance to wall: WA= 150 - 250 mm.	•		•	
	DW407	Wall support with transverse support Type IV: 1030 mm - Distance to wall: WA= 250 - 360 mm.	•		•	
(17- 24)	LUX-ECO 150	Insulation roof flashing, L= Max. 500 mm (adjustable). Wall thickness LUX-ECO In- sulation: min. 25 mm.			•	
(19)	LUX-ECO 150	Insulation wall flashing, L= Max. 360 mm (adjustable). Wall thickness LUX-ECO In- sulation: min. 25 mm.			•	

6.7 Modinox - PLA system Ø100 - Ø153

Fig.	Modinox Art./ ORDER	DESCRIPTION	Colo	or (*)	Applic	cation
NO.	NO.		rvs	antr.	rigid	flex
	2PLAMAFM100BEL	Bellfires appliance connection: Adapt- er Bellfires Ø100/150 mm → Modinox PLA Ø100/153 mm. L= 230 mm. INOX	•		•	
	2PLAMAFM100BELNO	Bellfires appliance connection: Adapt- er Bellfires Ø100/150 mm → Modinox PLA Ø100/153 mm. L= 230 mm. INOX - BLACK		•	•	
	2PLAELDR100250	Twin-wall balanced flue pipe, L= 250 mm., INOX	•		•	
	2PLAELDR100250NO	Twin-wall balanced flue pipe, L= 250 mm., INOX - BLACK		•	•	
	2PLAELDR100330	Twin-wall balanced flue pipe, L= 330 mm., INOX	•		•	
	2PLAELDR100330NO	Twin-wall balanced flue pipe, L= 330 mm., INOX - BLACK		•	•	
	2PLAELDR100500	Twin-wall balanced flue pipe, L= 500 mm., INOX	•		•	
10	2PLAELDR100500NO	Twin-wall balanced flue pipe, L= 500 mm., INOX - BLACK		•	•	
	2PLAELDR1001000	Twin-wall balanced flue pipe, L= 1000 mm., INOX	•		•	
11	2PLAELDR1001000NO	Twin-wall balanced flue pipe, L= 1000 mm., INOX - BLACK		•	•	

Fig.	Modinox Art./ ORDER	DESCRIPTION		Colo	or (*)	Applie	cation
NO.	NO.			rvs	antr.	rigid	flex
10	2PLAELRE100500	Telescopic twin- wall balanced flue pipe, L= min. 300 / max. 500 mm., IN- OX	A	•		•	
12	2PLAELRE100500NO	Telescopic twin- wall balanced flue pipe, L= min. 300 / max. 500 mm., IN- OX - BLACK			•	•	
	2PLACO90100	Twin-wall balanced flue elbow 90°, IN- OX		•		•	
14	2PLACO90100NO	Twin-wall balanced flue elbow 90°, IN- OX - BLACK			•	•	
	2PLACO45100	Twin-wall balanced flue elbow 45°, IN- OX		•		•	
15	2PLACO45100NO	Twin-wall balanced flue elbow 45°, IN- OX - BLACK			•	•	
	2PLACO30100	Twin-wall balanced flue elbow 30°, IN- OX		•		•	
	2PLACO30100NO	Twin-wall balanced flue elbow 30°, IN- OX - BLACK			•	•	
	2PLACO15100	Twin-wall balanced flue elbow 15°, IN- OX		•		•	
	2PLACO15100NO	Twin-wall balanced flue elbow 15°, IN- OX - BLACK			•	•	
	2PLACHAR100	Vertical (roof) ter- mination cap, L= 360 mm, INOX		•		•	
16	2PLACHAR100NO	Vertical (roof) ter- mination cap, L= 360 mm, INOX - BLACK			•	•	

Fig.	Modinox Art./ ORDER	DESCRIPTION		Colo	or (*)	Applic	cation
NO.	NO.			rvs	antr.	rigid	flex
	2DIVS5IN150	Roof flashing for a roof pitch of 5°- 30°, INOX		•		•	
17	2DIVS5IN150NO	Roof flashing for a roof pitch of 5°- 30°, INOX - BLACK	9		•	•	
	2DIVS3IN150	Roof flashing for a roof pitch of 31°- 45°, INOX		•		•	
17	2DIVS3IN150NO	Roof flashing for a roof pitch of 31°- 45°, INOX - BLACK			•	•	
17	2DIVRTS1	Roof tile fitting for roof flashing			•	•	
	2DIVCSOL153	Collar for roof flashing, INOX		•		•	
17	2DIVCSOL153NO	Collar for roof flashing, INOX - BLACK		•		•	
	2DIVJOCO155	Sealing ring for collar roof flashing				•	
	2DIVS5PS160	Roof flashing, standard model, lead: 0,6mm thick, for a roof pitch of 5°- 30°, with INOX cone		•		•	
17	2DIVS5PR160	Roof flashing, large tile model, lead: 1,0mm thick, for a roof pitch of 5°- 30°, with INOX cone		•		•	
	2DIVS3PS160	Roof flashing, standard model, lead: 0,6mm thick, for a roof pitch of 31°- 45°, with IN- OX cone		•		•	
	2DIVS3PR160	Roof flashing, large tile model, lead: 1,0mm thick, for a roof pitch of 31°- 45°, with IN- OX cone		•		•	

Fig.	Modinox Art./ ORDER	DESCRIPTION	Colo	or (*)	Applie	cation
NO.	NO.		rvs	antr.	rigid	flex
17	2DIVC5LA153NO	Cone cover for roof flashing, lead, for a roof pitch of 5°- 30°, INOX - BLACK		•	•	
	2DIVC3LA153NO	Cone cover for roof flashing, lead, for a roof pitch of 31°- 45°, INOX - BLACK		•	•	
	2DIVSOIN150	Roof flashing for existing chimney or flat roof, INOX	•		•	
18	2DIVSOIN150NO	Roof flashing for existing chimney or flat roof, INOX - BLACK		•	•	
10	2PLATHOR100	Horizontal (wall) termination kit, with rosettes, L= min. 580 mm / max. 780 mm. IN- OX	•		•	
19	2PLATHOR100NO	Horizontal (wall) termination kit, with rosettes, L= min. 580 mm / max. 780 mm. IN- OX - BLACK		•	•	
20	2PLACOJO100	Locking band, quick-fastening. INOX	•		•	
20	2PLACOJO100NO	Locking band, quick-fastening. INOX - BLACK		•	•	
21	2PLAJOIF100	Fiber seal			•	
	2PLACOMU100	Wall strap, INOX	•		•	
23	2PLACOMU100NO	Wall strap, INOX - BLACK		•	•	
23	2PLASUPLR100	Wall support, quick fastening	•		•	

Fig.	Modinox Art./ ORDER	DESCRIPTION	Colo	or (*)		cation
NO.	NO.		rvs	antr.	rigid	flex
24	2PLACOCF100	Set of ceiling finishing plates / Fire stops	•		•	
24	2PLAPVEN100	Ceiling finishing plate with ventila- tion openings	•		•	
	2PLAROSA100BT	Rosette, INOX	 •		•	
24	2PLAROSA100BTNO	Rosette, INOX - BLACK		•	•	
	2PLAROSA100BTBL	Rosette, INOX - WHITE			•	
	2PLAROSA100	Rosette with 4 mounting holes, INOX	•		•	
24	2PLAROSA100NO	Rosette with 4 mounting holes, INOX - BLACK		•	•	
	2PLAROSA100BL	Rosette with 4 mounting holes, INOX - WHITE			•	
24	2PLAEMES100	Concentric pipe with gauging ori- fice, L= 250 mm, INOX	•		•	
34	2PLAEMES100NO	Concentric pipe with gauging ori- fice, L= 250 mm, INOX - BLACK		•	•	
35	2PLAERAM100	Concentric pipe with inspection/ cleaning opening, L= 260 mm.	•		•	
36	2PLACOSO100	Floor support strap	•		•	
36	2PLACTOS100	Roof strap	•		•	

Fig.	Modinox Art./ ORDER	DESCRIPTION	Colo	or (*)	Applic	cation
NO.	NO.		rvs	antr.	rigid	flex
36	2PLAEPDS100	Clearance roof/ floor passage	•		•	
	2PLAADA71002020	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 200x200mm, INOX	•		•	•
	2PLAADA71002020NO	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 200x200mm, INOX - BLACK		•	•	•
	2PLAADA71002525	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 250x250mm, INOX	•		•	•
	2PLAADA71002525NO	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 250x250mm, INOX - BLACK		•	•	•
	2PLAADA71003030	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 300x300mm, INOX	•		•	•
	2PLAADA71003030NO	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 300x300mm, INOX - BLACK		•	•	•
	2PLAADA71002040	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 200x400mm, INOX	•		•	•
	2PLAADA71002040NO	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 200x400mm, INOX - BLACK		•	•	•

Fig.	Modinox Art./ ORDER	DESCRIPTION	Colo	or (*)	Applic	cation
NO.	NO.		rvs	antr.	rigid	flex
	2PLAADA71003040	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 300x400mm, INOX	•		•	•
	2PLAADA71003040NO	Adapter Modinox PLA → Flexible pipe, with chimney bottom finishing plate 300x400mm, INOX - BLACK		•	•	•
	2PLAADA61002020	Adapter Flexible pipe → Modinox PLA, with chimney top finishing plate 200x200mm, INOX	•		•	•
	2PLAADA61002525	Adapter Flexible pipe → Modinox PLA, with chimney top finishing plate 250x250mm, INOX	•		•	•
	2PLAADA61003030	Adapter Flexible pipe → Modinox PLA, with chimney top finishing plate 300x300mm, INOX	•		•	•
	2PLAADA61002040	Adapter Flexible pipe → Modinox PLA, with chimney top finishing plate 200x400mm, INOX	•		•	•
	2PLAADA61003040	Adapter Flexible pipe → Modinox PLA, with chimney top finishing plate 300x400mm, INOX	•		•	•
	2PTGKIMU100	Insulation kit ISO- MU for wall pas- sage	•		•	

Fig.	Modinox Art./ ORDER	DESCRIPTION		Colo	or (*)	Applic	cation
NO.	NO.			rvs	antr.	rigid	flex
	2PTGKIRA100 + la pente	Insulation kit ISO- RA for piched roof passage		•		•	
	2PTGKIRAV100 + la pente	Insulation kit ISO- RA for piched roof passage, roof and floor, includes a junction collar and 4 ventilation grilles		•		•	
	2PTGKIFO100	Insulation kit FOURP for ceiling passage. Com- plete wood floor kit		•		•	
	2PTGKIFO100BE	Insulation kit FOURP for ceiling passage. Com- plete concrete floor kit		•		•	
	2PTGKIFOV100	Insulation kit FOURP for ceiling + storey floor pas- sage. Complete wood floor kit		•		•	
	2PTGKIFOVBE100	Insulation kit FOURP for ceiling + storey floor pas- sage. Complete concrete floor kit		•		•	
	2PTGPPDR100BL	Ceiling finishing plates - Whit lac- quered - Option for kit FOURP	0	•		•	

belfires.

Your Bellfires dealer

001 - 18.12.2018 - 348168